


# ASSEMBLY INSTRUCTIONS FOR #14879 SG342-14R-1-TREW14-1

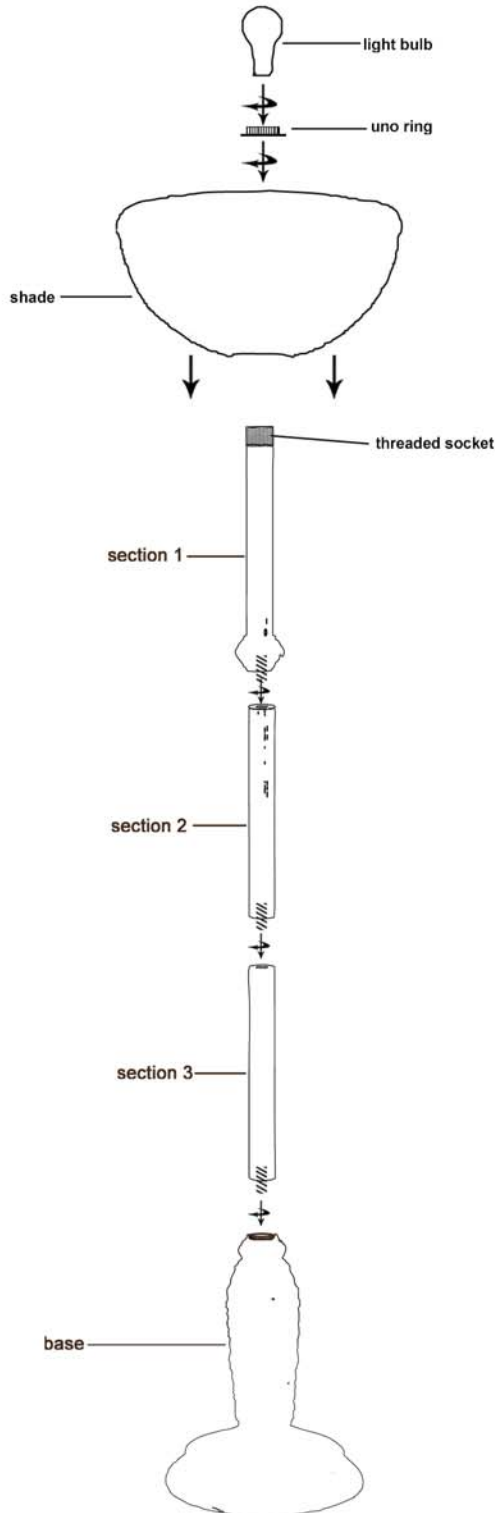

## IMPORTANT

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Remove uno ring from threaded socket.
2. Place shade onto threaded socket fitter and seat to floor base.
3. Screw uno ring onto threaded socket

✦ To tighten shade properly, turn shade and uno ring clockwise simultaneously. ✦

**CAUTION: Do NOT over tighten!**

4. Place light bulb into socket.



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)