

INSTALLATION INSTRUCTIONS

FOR ITEM 156566 CILINDRO TEXTRENE FLUSHMOUNT

Meyda
CUSTOM LIGHTING

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*


Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

FIXTURE COMPONENTS

1. 48"W FLUSHMOUNT SHADE
2. LIGHT CLUSTER ASSEMBLY
3. OUTER IDALIGHT DIFFUSER PANELS (QTY 7)
4. CENTER IDALIGHT DIFFUSER PANEL

Caution: Be sure power is off at the main breaker box prior to installation. Read all instructions in their entirety before beginning installation.

1. Carefully unpack all components and make certain that everything is accounted for.
2. Remove Brass Balls from Canopy to release Crossbar w/ Studs. Reserve Brass Balls for later use.
3. Attach Crossbar to J-Box with customer supplied hardware ensuring that electrical supply wires remain accessible.
4. Make electrical connection from fixture lead wires to structure supply wires following all Local Codes and Procedures.
5. Slide Canopy w/ Light Cluster over Studs on Crossbar and secure with Brass Balls.
6. Install 8-E26 15 LED Watt Bulbs(not included) into Sockets.
7. Using provided Mounting Diagram for approximate Bolt placement, prepare ceiling by screwing customer supplied Lag Bolts into structure ensuring that connection is suitable for minimum 50lbs.
8. Slide Shade over Lag Bolts and secure with customer supplied Hex and Acorn Nuts.
9. Install Idalight Diffuser Panels into Bottom of Shade.
10. Power on and ENJOY!!!

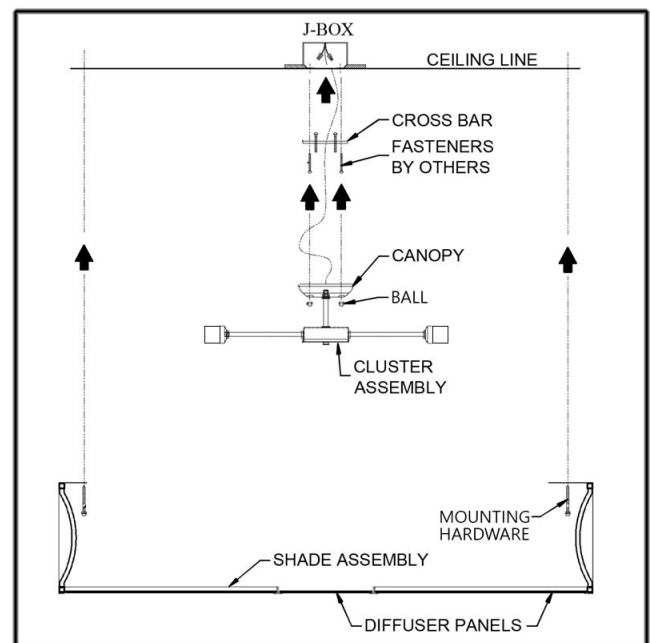

MOUNTING DIAGRAM

