


ASSEMBLY INSTRUCTIONS FOR # 232664

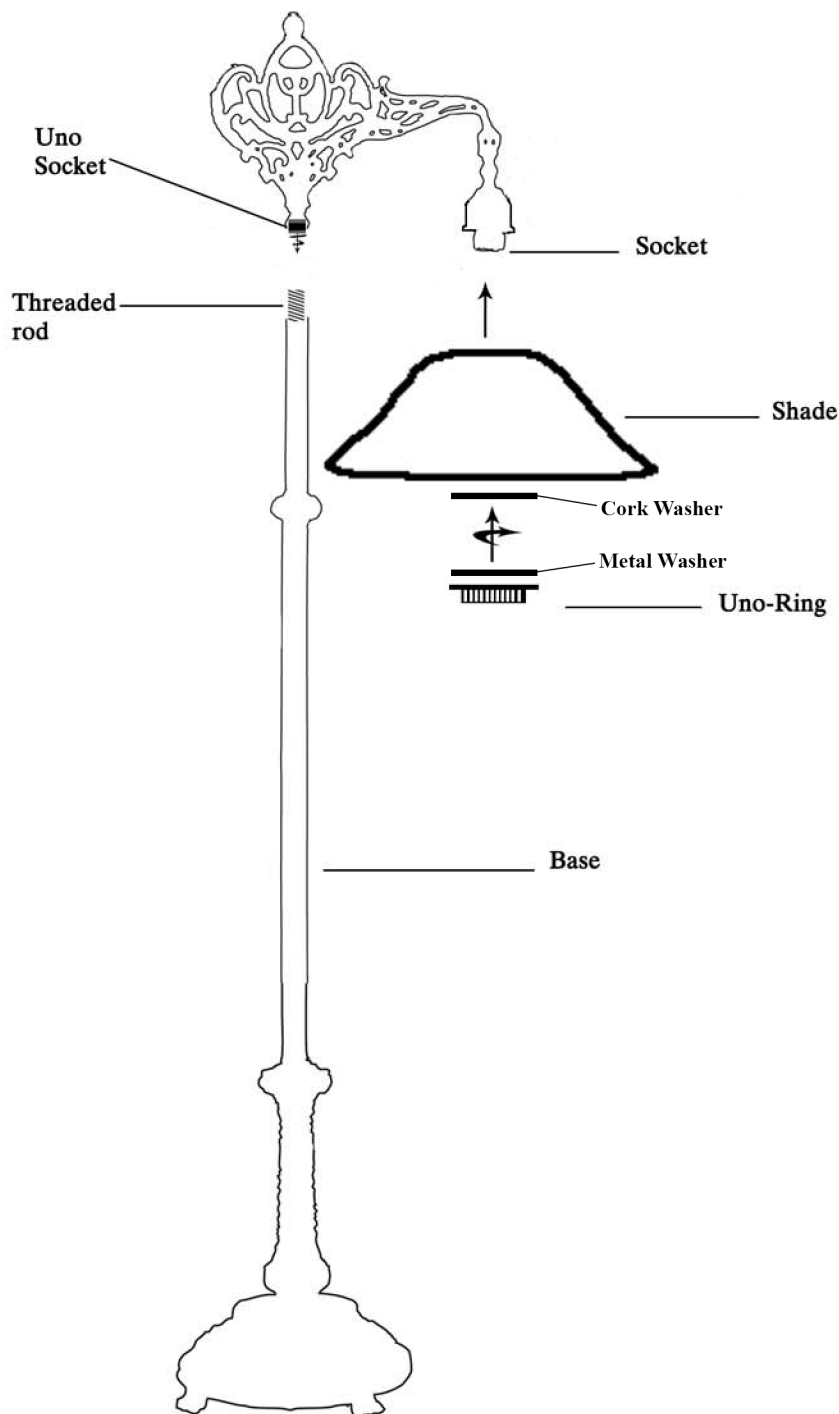

IMPORTANT

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Screw top piece down onto the threaded rod located on the base.
2. Remove uno-ring from fitter socket.
3. Place shade up and over fitter socket.
4. Slide Cork Washer, then Metal Washer onto Socket and secure Shade by threading Uno Ring onto Socket until tight.
5. Screw light bulb into socket.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com