


ASSEMBLY INSTRUCTIONS FOR 24314 (Q212PS-04-151)

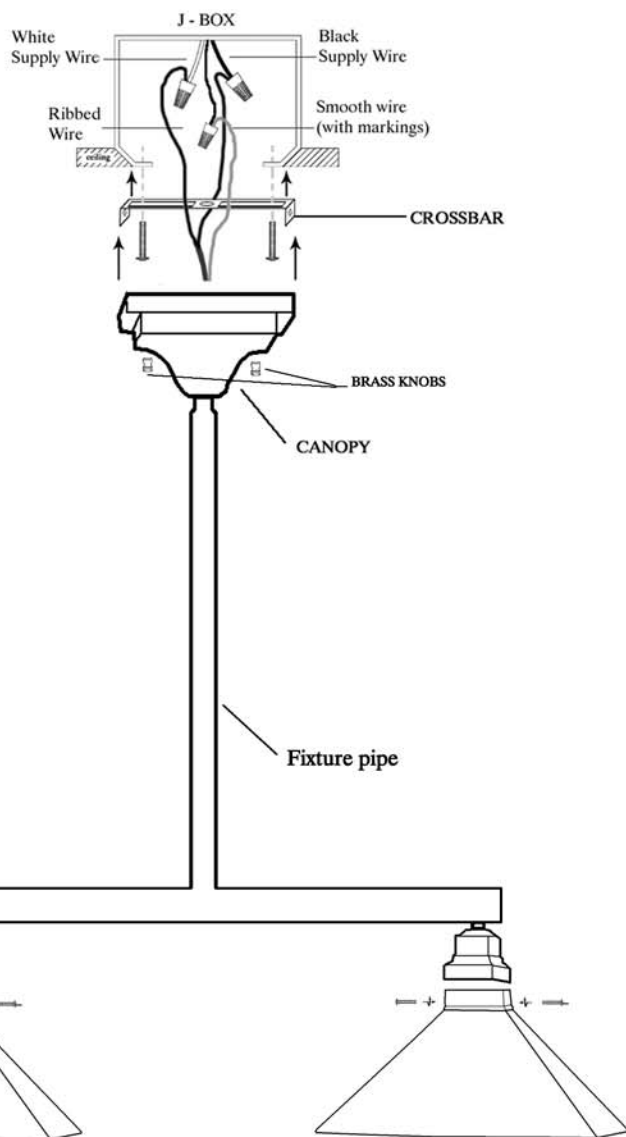

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

***** This is a two person job.*****

- 1. Attach crossbar to J-Box.**
- 2. Attach fixture wires to J-Box wires as shown. (wire as per local electrical code)**
- 3. Attach fixture to J-Box using brass knobs.**
- 4. Remove uno-ring from fitter socket, loosen (4) set screws from fitter hub.**
- 5. Place shade up and over fitter socket.**
- 6. Screw uno-ring onto fitter socket and tighten to shade.**
- 7. Tighten fitter set screws into shade ring.**



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com